

MACHINE SERIAL NUMBERS (WITH DATE)

YEAR

REPRESENTED WITH A LETTER
A = 2018
B = 2019
C = 2020
ETC.

WEEK

REPRESENTED WITH A 2-DIGIT NUMBER
31 = JULY 30- AUG 3
32 = AUG 6 - AUG 10
ETC.

HP

HORSEPOWER
SL-150/SW-350
2 = 1/2 HP
4 = 1 HP

MODEL

REPRESENTED WITH LETTER CODES
T24 = TORO
45 = SL-45
90 = SL-90
100 = SL-100
150 = SL-150
175 = SL-175
300 = SW=300
325 = SW-325
350 = SW-350
375 = SW-375
200 = OH-200

FOOT PEDAL(IF PRESENT)

FOOT PEDAL
BLANK = NO FOOT PEDAL
F = FOOT PEDAL

AC/DC

AC OR DC
A = AC MACHINE
D = DC MACHINE

SERIAL NUMBER

BOARD
SERIAL NUMBER